
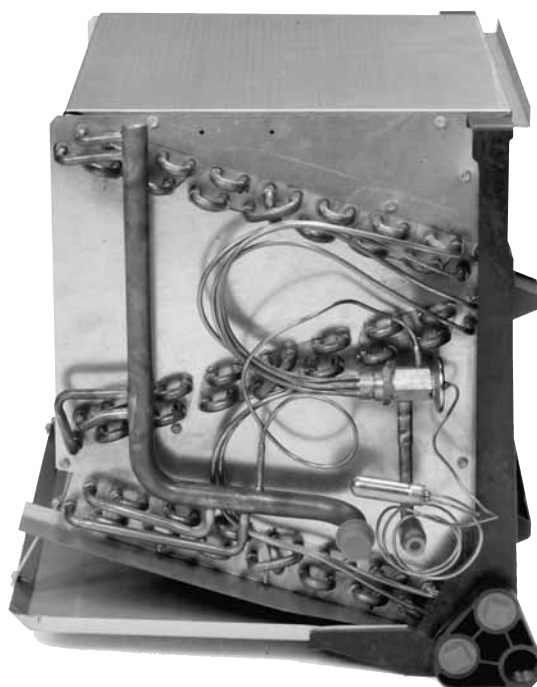


INSTALLATION INSTRUCTIONS

FOR REPLACEMENT UNCASED COILS FOR AIR HANDLERS:

RCSA: featuring R-22 Refrigerant

RCSL: featuring earth-friendly R-410A Refrigerant

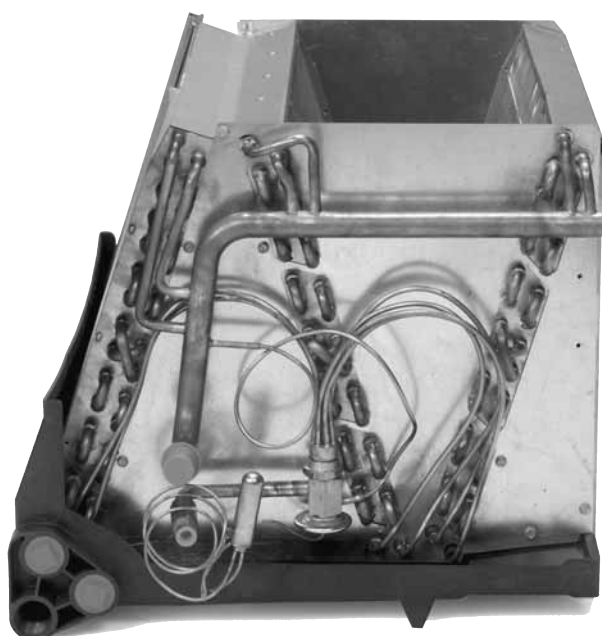

NOTE: Shown with Horizontal Drip Shield.
(Requires RXHH- Horizontal Adapter Kit.)



RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!

⚠ WARNING

These instructions are intended as an aid to qualified licensed service personnel for proper installation, adjustment and operation of this unit. Read these instructions thoroughly before attempting installation or operation. Failure to follow these instructions may result in improper installation, adjustment, service or maintenance possibly resulting in fire, electrical shock, property damage, personal injury or death.




ISO 9001:2000

Certificate Number: 30164

DO NOT DESTROY THIS MANUAL

PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICEMAN

FIGURE 1
MODEL NUMBER EXPLANATION

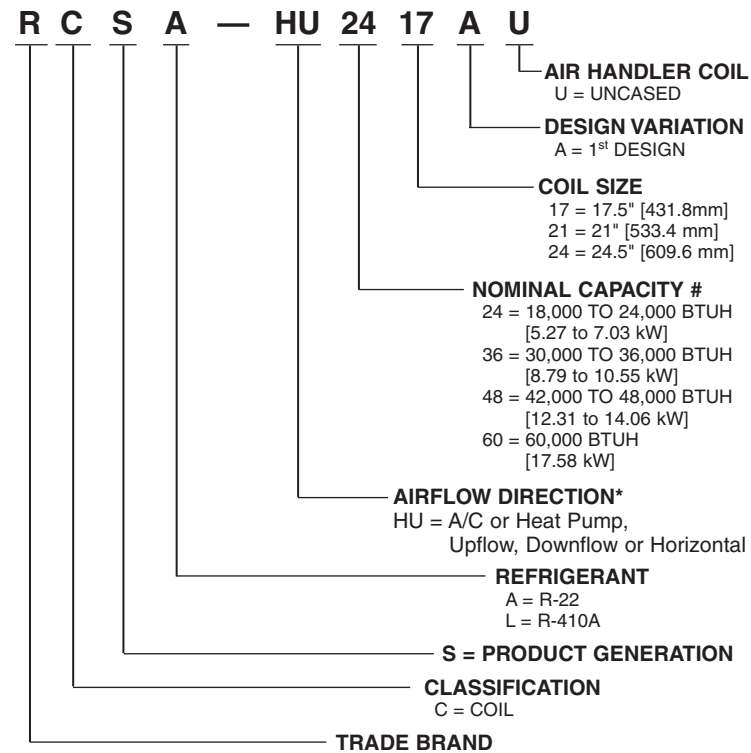

*All replacement coils for HM and AU air handler applications will be HU.

GENERAL

RCSA- and RCSL- are replacement only uncased coils. RCSA- replacement coils are used only in (-)HKA, (-)HLA and (-)HSA R-22 air handlers. RCSL- replacement coils are used only in (-)HKL, (-)HLL and (-)HSL R-410A air handlers.

For horizontal applications, a horizontal drip shield must be installed to catch excess condensate drainage. RCSA and RCSL replacement coils are shipped without a horizontal drip shield. For a horizontal adapter kit, refer to Tables 1 and 2 for correct kit matchups.

⚠ WARNING

The drain pan that comes with the RCSA- or RCSL- Uncased Air Handler Coil is not built with a high-heat resistant material. Do NOT use these coils with gas and oil fossil fuel furnaces, or any other high-heat device. Failure to obey this warning could result in serious equipment damage, personal injury or death.

TABLE 1
R-22 UNCASED COILS: RCSA- ACCESSORY INFORMATION

Replacement R-22 Uncased Coil Model	Original R-22 Air Handler Model			Horizontal Adapter Kit Model Number
	(-)HSA-HM/AU	(-)HLA-HM	(-)HKA-HM	
RCSA-HU2417AU	1817 and 2417	2417	2417	RXHH-A02
RCSA-HU3617AU	3017 and 3617	3617	3617	RXHH-A03
RCSA-HU3621AU	3621	3621	3621	RXHH-A03
RCSA-HU4821AU	4221 and 4821	4821	4821	RXHH-A04
RCSA-HU4824AU	4824	4824	4824	RXHH-A04
RCSA-HU6024AU	—	6024	6024	RXHH-A05

TABLE 2
R-410A UNCASED COILS: RCSL- ACCESSORY INFORMATION

Replacement R-410A Uncased Coil Model	Original R-410A Air Handler Model			Horizontal Adapter Kit Model Number
	(-)HSL-HM/AU	(-)HLL-HM	(-)HKL-HM	
RCSL-HU2417AU	1817 and 2417	2417	2417	RXHH-A02
RCSL-HU3617AU	3017 and 3617	3617	3617	RXHH-A03
RCSL-HU3621AU	3621	3621	3621	RXHH-A03
RCSL-HU4821AU	4221 and 4821	4821	4821	RXHH-A04
RCSL-HU4824AU	4824	4824	4824	RXHH-A04
RCSL-HU6024AU	—	6024	6024	RXHH-A05