
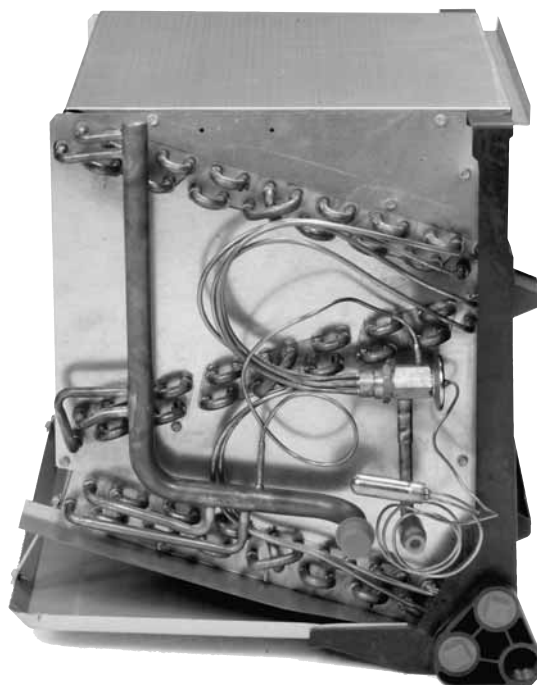


# INSTALLATION INSTRUCTIONS

FOR REPLACEMENT UNCASED COILS FOR  
AIR HANDLERS:

**RCSA:** featuring R-22 Refrigerant

**RCSL:** featuring earth-friendly R-410A Refrigerant

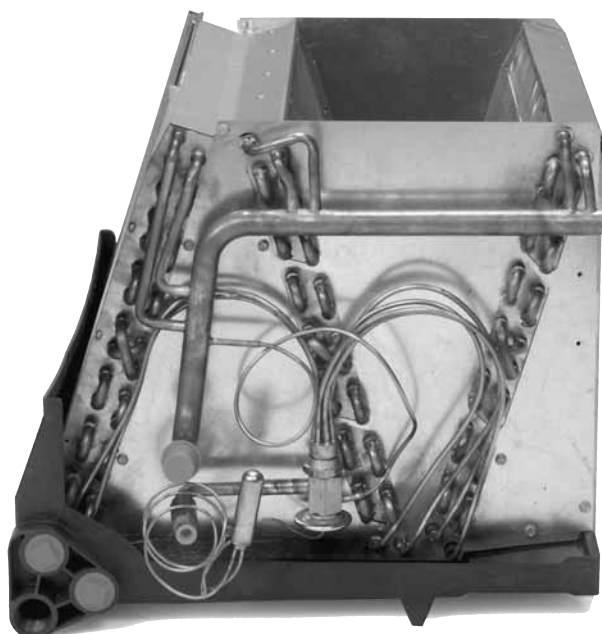

**NOTE:** Shown with Horizontal Drip Shield.  
(Requires RXHH- Horizontal Adapter Kit.)



**RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!**

## WARNING

These instructions are intended as an aid to qualified licensed service personnel for proper installation, adjustment and operation of this unit. Read these instructions thoroughly before attempting installation or operation. Failure to follow these instructions may result in improper installation, adjustment, service or maintenance possibly resulting in fire, electrical shock, property damage, personal injury or death.




**ISO 9001:2000**

Certificate Number: 30164

**DO NOT DESTROY THIS MANUAL**

**PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICEMAN**

**FIGURE 1**  
MODEL NUMBER EXPLANATION

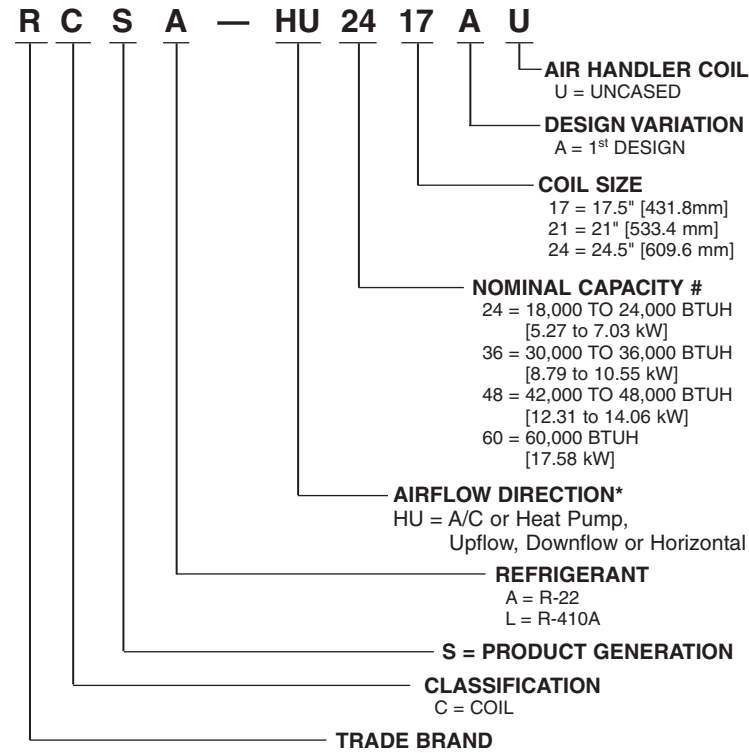

\*All replacement coils for HM and AU air handler applications will be HU.

## GENERAL

RCSA- and RCSL- are replacement only uncased coils. RCSA- replacement coils are used only in (-)HKA, (-)HLA and (-)HSA R-22 air handlers. RCSL- replacement coils are used only in (-)HKL, (-)HLL and (-)HSL R-410A air handlers.

For horizontal applications, a horizontal drip shield must be installed to catch excess condensate drainage. RCSA and RCSL replacement coils are shipped without a horizontal drip shield. For a horizontal adapter kit, refer to Tables 1 and 2 for correct kit matchups.

### ⚠ WARNING

The drain pan that comes with the RCSA- or RCSL- Uncased Air Handler Coil is not built with a high-heat resistant material. Do NOT use these coils with gas and oil fossil fuel furnaces, or any other high-heat device. Failure to obey this warning could result in serious equipment damage, personal injury or death.

**TABLE 1**  
R-22 UNCASED COILS: RCSA- ACCESSORY INFORMATION

| Replacement R-22 Uncased Coil Model | Original R-22 Air Handler Model |           |           | Horizontal Adapter Kit Model Number |
|-------------------------------------|---------------------------------|-----------|-----------|-------------------------------------|
|                                     | (-)HSA-HM/AU                    | (-)HLA-HM | (-)HKA-HM |                                     |
| RCSA-HU2417AU                       | 1817 and 2417                   | 2417      | 2417      | RXHH-A02                            |
| RCSA-HU3617AU                       | 3017 and 3617                   | 3617      | 3617      | RXHH-A03                            |
| RCSA-HU3621AU                       | 3621                            | 3621      | 3621      | RXHH-A03                            |
| RCSA-HU4821AU                       | 4221 and 4821                   | 4821      | 4821      | RXHH-A04                            |
| RCSA-HU4824AU                       | 4824                            | 4824      | 4824      | RXHH-A04                            |
| RCSA-HU6024AU                       | —                               | 6024      | 6024      | RXHH-A05                            |

**TABLE 2**  
R-410A UNCASED COILS: RCSL- ACCESSORY INFORMATION

| Replacement R-410A Uncased Coil Model | Original R-410A Air Handler Model |           |           | Horizontal Adapter Kit Model Number |
|---------------------------------------|-----------------------------------|-----------|-----------|-------------------------------------|
|                                       | (-)HSL-HM/AU                      | (-)HLL-HM | (-)HKL-HM |                                     |
| RCSL-HU2417AU                         | 1817 and 2417                     | 2417      | 2417      | RXHH-A02                            |
| RCSL-HU3617AU                         | 3017 and 3617                     | 3617      | 3617      | RXHH-A03                            |
| RCSL-HU3621AU                         | 3621                              | 3621      | 3621      | RXHH-A03                            |
| RCSL-HU4821AU                         | 4221 and 4821                     | 4821      | 4821      | RXHH-A04                            |
| RCSL-HU4824AU                         | 4824                              | 4824      | 4824      | RXHH-A04                            |
| RCSL-HU6024AU                         | —                                 | 6024      | 6024      | RXHH-A05                            |